

CLEANING MACHINE

Use for

Check if your ordered product is in good shipment condition, with the accessories, any damage during transportation, please contact us or the buttons in time if you find any problems.

Manual gives instructions on the correct operation, it's important that you instructions carefully.
any change in the product (including the specification), we won't inform

WARNING

the product long-time stable working, please read this manual carefully for installation, transportation, repair or maintenance, in order to fully understand the safety problems, the technical data and operating methods of the other related notices points.

Following points during use

1. Make sure inlet hose is in the bucket, start machine in "COOL" mode to avoid electric shock and get in dry protection, "STEAM" MODE must be used with clean water.

Inlet Hose




2. The maximum power of this machine is 3300W, please use it under the range of power supply, if the general domestic power line cannot bear and trip, please use small steam or 2200W "HOT" water function, do not use large steam and 3300W "HOT" water function, so as not to burn out the circuit.



STEAM CLEANING MACHINE


3. Strong acid detergent is not allowed. We are unable to accept any liability in case of blockage or breakage for nonconforming usage.

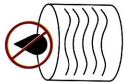

4. Spray gun soaked in the water is not allowed, to avoid any internal parts damaged.



5. 22mm short and long spray nozzles are just used on steam mode, 200°C spinning gun should be used in HOT and COOL mode. STEAM mode is not allowed.

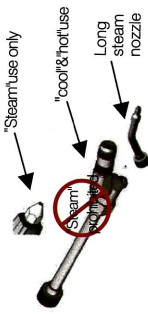


7. Please check if any blockage in Nozzle vent hole if poor steam, white dirt will be created after long time using.



6. Do not touch directly by hand as the internal heater and steam nozzle temperature is very high after using steam and hot water function



8. Direction can be adjusted by left or right turning, water shape (columnar or mist) can be adjusted by nozzle switching

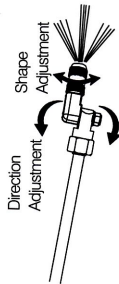

STEAM CLEANING MACHINE

9. It will take about 25s to create steam when you start "STEAM" MODE it is normal when the water reserved in the pipeline automatically drained before the steam is out.





Steam nozzle only for "STEAM" mode

10. Please use "COOL" mode to drain out the inside water before you shut down this machine. "STEAM" or "HOT" mode is forbidden.




Choose "COOL" mode to do drainage

11. "High Temp" warning will light on the LCD display and indicate over-temperature. Please check if the inlet filter's blockage caused the poor water suction or shortage. Clean the filter and Machine will resume working after 20 minutes cooling.

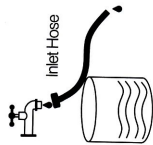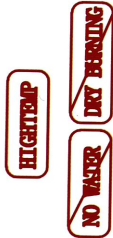

13. Please stop working immediately once the machine gets wet, plug off Dry off and let it dry naturally before you re-start it.

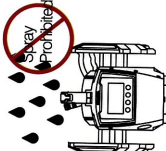

14. Don't spray to any people, pets and machine itself to avoid accident during operation.

