


## PCW-4W/PCW-4WLi



### EXTENSION WAND USAGE



### LI-ION BATTERY'S CHARGE

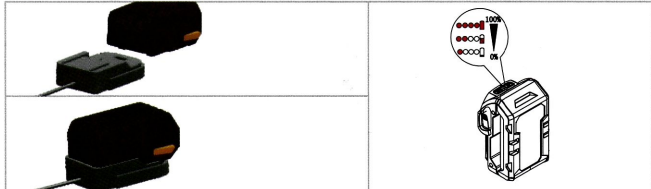

Note: Check the battery level before each usage.  
The led indicator light will be flashed when in low level

## Air Purging:

With normal use, air can get trapped in the washer's hose. We recommend the following steps to purge the air out of the system and achieve maximum washing pressure:

1. Power up your Cleaning machine.
2. Point the Spray Gun into the water tank and squeeze the lever until the water stream steadies.
3. Start to enjoy your cleaning works

## 8. TROUBLESHOOTING

PROBLEM	PROBABLE CAUSE	REMEDY
Pump can't start	• Li-ion battery power not enough <small>(PCW-4Li/PCW-4WLi)</small>	• Check battery and charge in time
	• No AC power supply(PCW-4P/PCW-4W)	• Check the power supply, make the connection tight
	• AC voltage is not correct <small>(PCW-4P/PCW-4W)</small>	• Make sure the input voltage within rated voltage $\pm 5\%$
	• Temperature is too low( $< 0^{\circ}\text{C}$ )	• Increase ambient temperature
Inconsistent and/or erratic pressure	• Nozzle worn	• Replace nozzle
	• Nozzle clogged	• Clean nozzle orifice
	• Water is low	• Add water
	• Air sucked into system	• Fill water
	• Air in pump (not properly primed)	• Remove nozzle, prime pump
	• Vacuum lock (cap vent clogged) <small>(PCW-4P/PCW-4W)</small>	• Clean cap air vent
	• Water temp too high	• Add cold water to reduce temp
	• Low battery <small>(PCW-4P/PCW-4WLi)</small>	• Charge or replace battery
"Motor continues to run even though trigger is released"	• High pressure system or pump hydraulic circuit not watertight	• Check for leaks at spray gun and pump
	• Air in system	• Re-prime the unit
Motor stops abruptly	• Tank(s) empty <small>(PCW-4P/PCW-4WLi)</small>	• Fill tank(s)
	• Low battery power <small>(PCW-4P/PCW-4WLi)</small>	• Charge or replace battery
	• Power plug looser <small>(PCW-4P/PCW-4W)</small>	• Plug again
	• Power switch off	• Turn switch on
	• Thermal breaker tripped	• Turn off, let unit cool
"Motor buzzes but fails to start or does not start at all"	• Problems with pump auto shut-off	• Contact seller
	• Unit in disuse for extended time	• Contact seller
	• Pressure needs to be relieved	• Squeeze trigger and relieve pressure
"No water flow/ Water not priming"	• The water inlet is blocked	• Clean the inlet filter
	• There is impurities inside	• Remove the internal impurities