


Exploded view/parts list are subject to change at any time without notice. (As of Feb. 2013)

E25-0615 Assembly

⚠ CAUTION

The illustration is for information only. Users should never disassemble parts.
Contact the sales agent from whom you purchased the tool or the manufacturer, should the tool need service,
repair or replacement of parts.

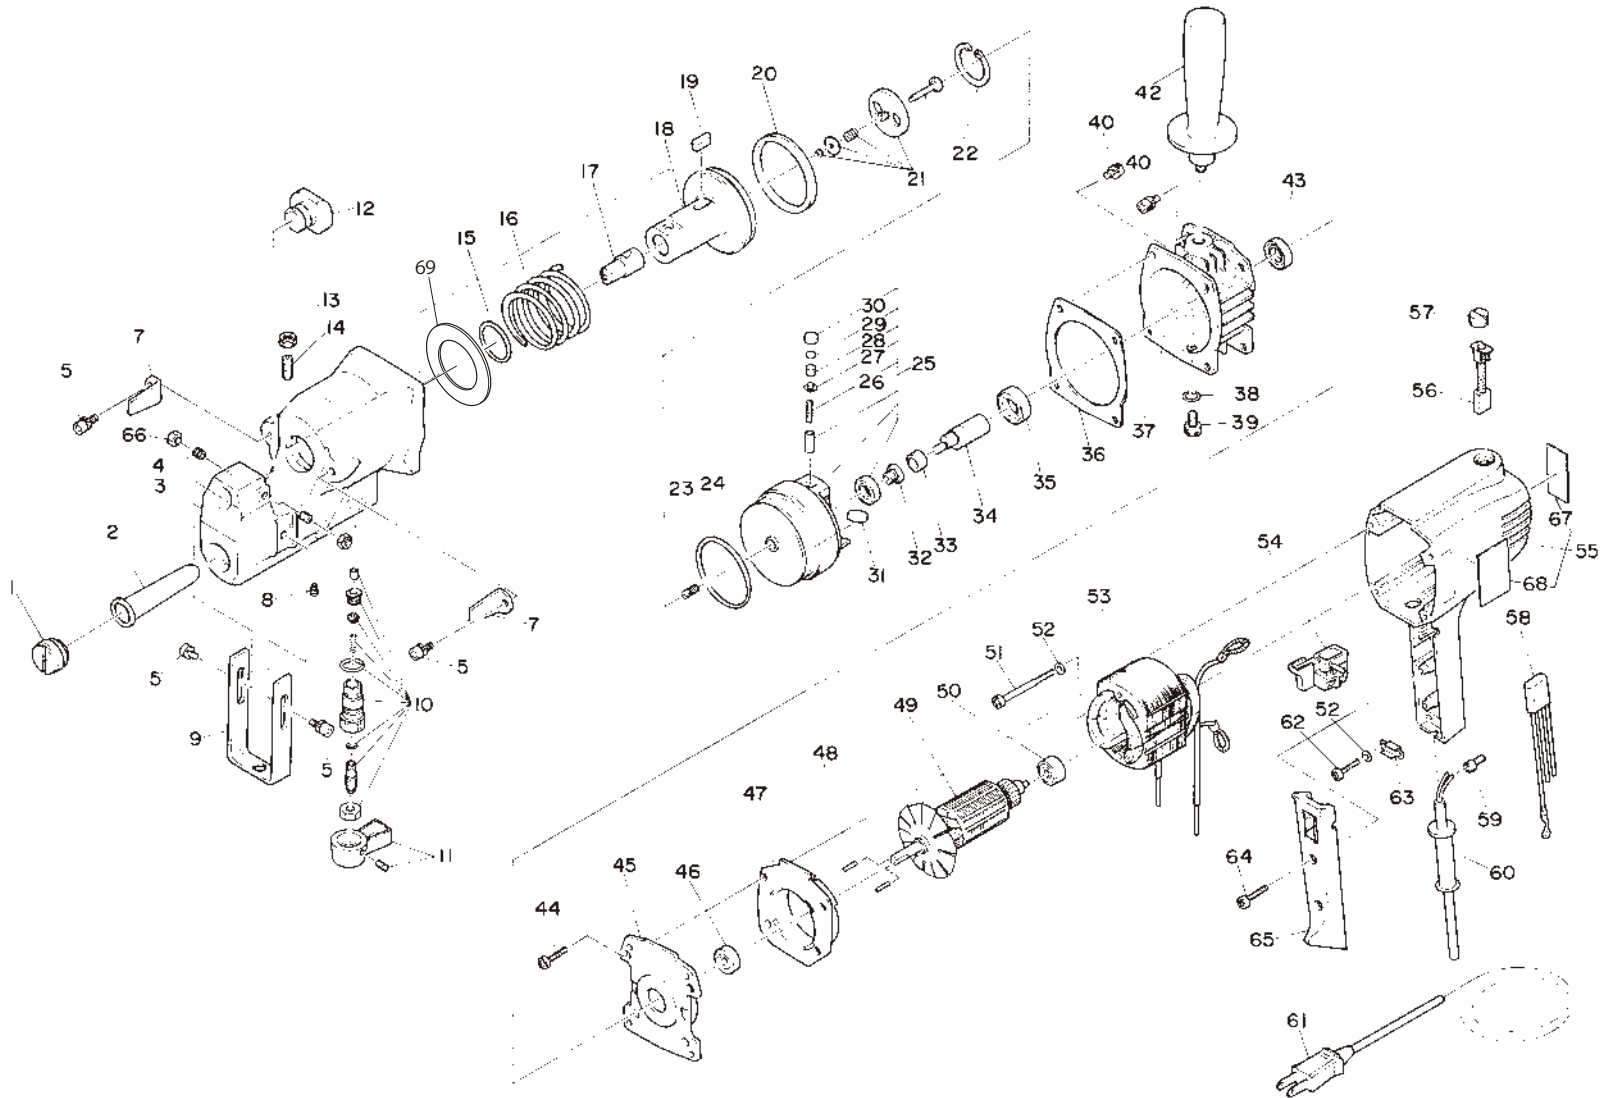

Exploded view/parts list are subject to change at any time without notice. (As of Feb. 2013)

E25-0615 Parts List

The parts numbers with () are included in the Ass'y parts written above them. ☉ Consumable items ※ Locally available items

No.	Part No.	Part Name	Q'ty	No.	Part No.	Part Name	Q'ty
1	TQ01015	Oil Bag Screw	1	※ 38	TP05872	O-Ring P-10	1
2	TQ01014	Oil Bag	1	※ 39	TP03247	Hex. Socket Head Cap Screw 10 × 15	1
3	TQ01009	Frame	1	※ 40	TQ04549	Hex. Socket Head Cap Screw 6 × 14 With Spring Washer	8
※ 4	TQ02613	Hex. Socket Set Screw with Flat Point 5 × 16	2	42	TQ01051	Sub-Handle	1
※ 5	TQ03327	Hex. Socket Head Cap Screw 5 × 10 With Spring Washer	4	☉ ※ 43	TQ01034	Oil Seal S15257	1
7	TQ01049	Stripper	2	44	TQ01058	⊕ YPF Self-Tapping Screw 5 × 20	4
※ 8	TP15640	Hex. Socket Set Screw NPT 1/16	1	45	TQ01013	Motor Flange	1
9	TQ01048	Stopper	1	※ 46	TP00468	Ball Bearing 608ZZ	1
10	TB00967	Return Valve Ass'y	1set	47	TQ00994	Fan Guide	1
11	TB00969	Return Lever Ass'y	1set	※ 48	TP12618	Needle Roller 3 × 11.8	2
☉ 12	TK00429	E Die 15B	1	49	TB00991	Armature Ass'y	1set
※ 13	TQ01050	Small Hex. Nut Type 3M8	1	※ 50	TP15408	Ball Bearing 626ZZ	1
※ 14	TP12382	Hex. Socket Set Screw with Cup Point 8 × 12	1	51	TQ00995	⊕ High-Low Screw 4 × 51	2
☉ ※ 15	CP07415	O-Ring P-30	1	※ 52	TP04234	Spring Washer M4	4
16	TQ01036	Spring 5.5 × 50 × 57.5	1	53	TB00992	Stator Ass'y	1set
☉ 17	TK00428	E Punch 15	1	54	TQ00996	Switch	1
18	TB01089	Ram Sub Ass'y	1set	55	TB02251	Motor Case Ass'y	1set
※ 19	(TQ01022)	Sunken Key 6 × 6 × 16 round ends	1	67	(TQ02698)	Name Plate	1
☉ ※ 20	TQ01021	Y Type Packing OSI 56 × 66 × 6	1	68	(TQ02487)	Warning Label	1
☉ 21	TB01090	Limit Valve Ass'y	1set	☉ 56	TB00993	Carbon Brush Ass'y	1set
※ 22	TQ01088	Circlip JO-34	1	57	TP16323	Brush Cap	2
23	TQ01033	Spring 0.5 × 5.3 × 13-14	1	※ 59	TP13769	Insulated Closed End Connector 2-SD JST	1
☉ ※ 24	TQ01032	O-Ring P-56	1	60	TP16265	Stopper	1
☉ 25	TB01179	Spare Pump Body Ass'y	1set	61	TQ01431	Cabtyre Code	1
26	(TQ01040)	Spring 0.6 × 3.2 × 18.4	1	※ 62	TP16208	⊕ Cross Recessed Pan Head Tapping Screw 4 × 16	2
☉ 27	(TQ01041)	Check Valve	1	63	TQ01001	Cord Clamp	1
28	(TQ01042)	Spring 0.8 × 4.8 × 6.5	1	※ 64	TQ01002	⊕ Cross Recessed Pan Head Tapping Screw 4 × 20	2
29	(TQ01364)	Spring Seat	1	65	TQ01003	Handle Cover	1
☉ 30	(TQ01365)	Check Valve Cap	1	※ 66	LP11858	Hex. Not Type 1 M5	2
31	TQ01045	Magnet 18 × 8.3	1	69	TQ11031	Washer 42.5 × 57.5 × 1	1
32	TQ01031	Distance Collar	1				
※ 33	TQ01038	Needle Bearing RNAF 101710	1				
34	TQ01037	Cam Spindle	1				
※ 35	TQ01035	Ball Bearing 6902ZZ	1				
36	TQ01046	Gasket	1				
37	TQ01012	Oil Case	1				