

## **Intelligent Hybrid System**

# Aspila TOPAZ

# Single Line Telephone User Reference Guide

Prepared by

FJT Communications Systems Sdn Bhd www.fjt.com.my

#### To Make an Intercom Call



🦈 ⇒ Dial Extension Number ⇒ Wait for Answer ⇒ 🗥



#### To Make an Outgoing Call



⇒ Dial 9 ⇒ Dial Telephone No ⇒ Wait for Answer ⇒



#### Call Transfer (Supervise)



Press Flash ⇒ Dial Extension No ⇒ Hear Ringing ⇒

Wait for Answer ⇒ 🗥 ⇒ 🖘



### Call Retrieve (Transfer to Busy or No Answer Extension)



Press Flash ⇒ Dial Extension No ⇒ Ringing



Busy ⇒ Press Flash ⇒ (\*\*)

### Call Transfer (Un-supervise)



Press Flash ⇒ Dial Extn No ⇒ Hear Ringing ⇒



#### **Call Pick-up (Group)**





🤝 ⇒ Dial 😿 🛪 🖒 🕻 🖑

### **Direct Call Pick-up**



 
#### Redial (Last Number Redial)




#### **Call Back**



#### Add-On Conference (Max 8 Parties)




#### **Call Forward All Calls**

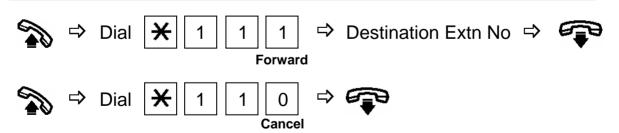

#### System Abbreviated Dialing (ABB)



#### Phone Lock / Unlock

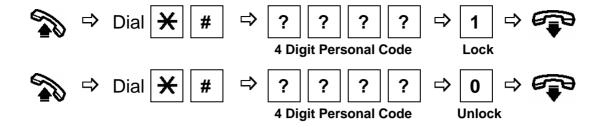

Nothing contained in this user guide shall be deemed to be, and this user guide does not constitute, a warranty of, or representation with respect to, any of the equipment covered. This user guide is subject to change without notice and FJT Communications Systems Sdn Bhd has no obligation to provide any updates or corrections to this user guide. FJT Communications Systems Sdn Bhd reserves the right, without prior notice, to make changes in the equipment's feature access codes as it deems appropriate. No representation is made that this user guide is complete or accurate in all respect and FJT Communications Systems Sdn Bhd shall not be liable for any errors or omissions. In no event shall FJT Communications Systems Sdn Bhd be liable for any incidental or consequential damages in connection with the use of this user guide.

Prepared and printed by

FJT Communications Systems Sdn Bhd www.fjt.com.my

October 2008