




QTRON STARLITE INSTALLER MANUAL

VER 1.0

Main Board Terminals & Wiring

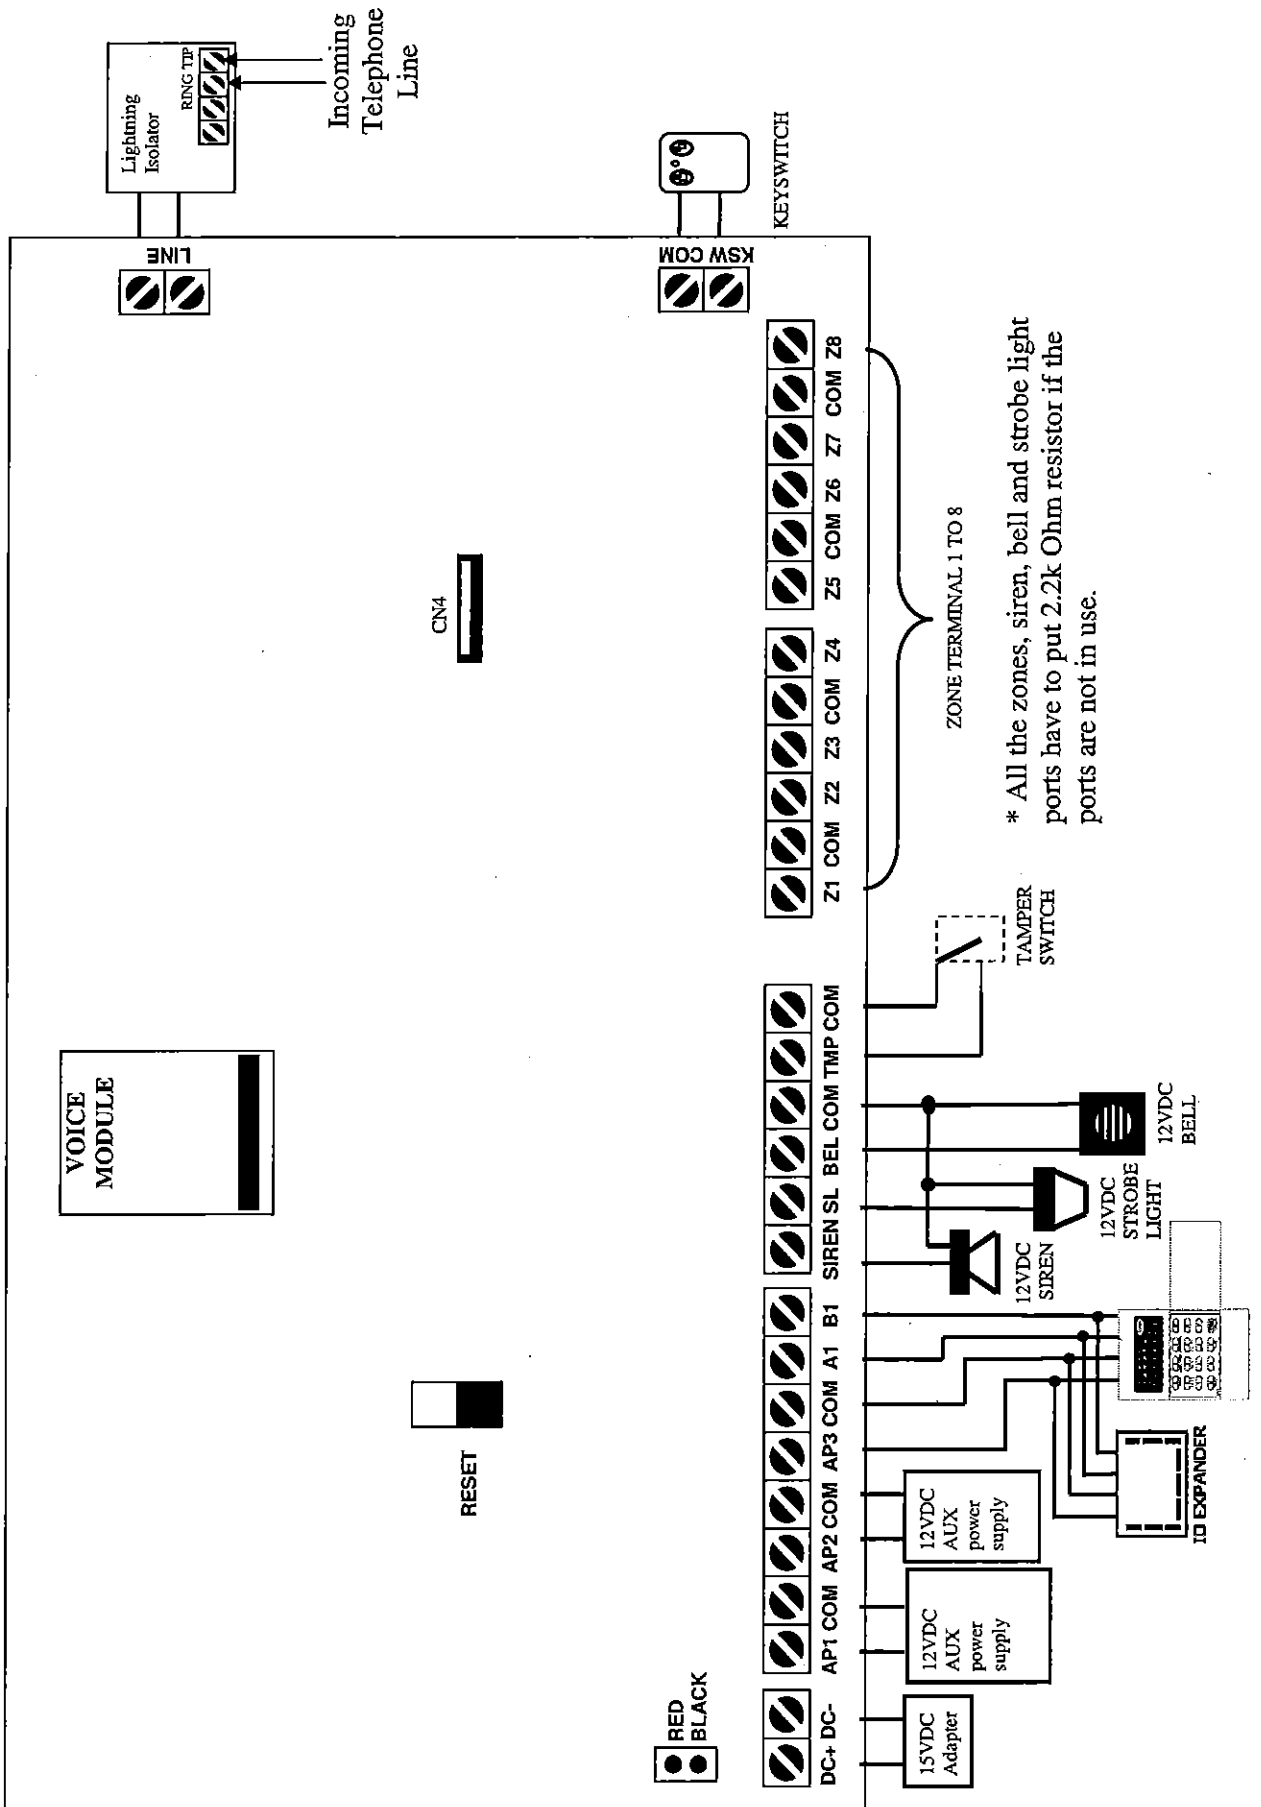

CL	Item	Description	Default Setting
			Zone LED 1 2 3 4 5 6 7 8 9
Enter Installer programming Mode : [COM] + [Installer Code] + [#]			
Zone Type Setting (Zone 1 – Zone 8)			
02	24 Hours Zone	Zone LED ON means the zone is assigned as 24 Hour zone	○○○○ ○○○○ X #
03	Instant Zone	Zone LED ON means the zone is assigned as Instant zone	●●●● ●●●● X #
04	Delay Zone	Zone LED ON means the zone is assigned as Delay zone	●○○○ ○○○○ X #
05	Interior Zone	Zone LED ON means the zone is assigned as interior zone	○○○○ ○○○○ X #
08	Silent Zone	Zone LED ON means the zone is assigned as Silent zone	○○○○ ○○○○ X #
09	Light Zone	Zone LED ON means the zone is assigned as Light zone	○○○○ ○○○○ X #
Keyswitch & Tamper Setting			
10	Keyswitch Type & Tamper Setting	Zone 2 LED ON mean enable keyswitch Zone 3 LED ON mean the keyswitch is Momentary ELSE Latch Remote Control Zone 4 LED ON mean keyswitch is NC type ELSE NO Zone 5 LED ON mean enable keyswitch Siren Toot ELSE Strobe Light blink on Remote Control Arm or Disarm (Toot once / Blink 3 sec: ARM, Toot twice / Blink 8 sec: DISARM) Zone 6 LED ON mean enable Tamper Zone 7 LED ON mean Tamper activated 24 hours ELSE Activate Durlng Arm Zone 8 LED ON mean Tamper is NC type ELSE NO	X●○○ ○●○○ X #
Other Setting (For Zone 1 – Zone 8)			
11	Zone Response	Zone LED ON mean the zone is programmed as Fast Response Zone LED OFF mean the zone is programmed as Slow Response (*Zone response time open for setting in [33 & 34])	●●●● ●●●● X #
12	Zone Pulse Count Group	Zone LED ON mean the zone is programmed to the zone pulse count group (*Zone pulse counter open for setting in [35])	○○○○ ○○○○ X #
13	CMS Zone Reporting	Zone LED ON mean zone triggered will report to CMS	●●●● ●●●● X #
14	CALL Reporting	Zone 1 LED ON mean enable Keypad Alarm (Fire, Emergency, Panic) report Zone 2 LED ON mean enable Tamper report Zone 3 LED ON mean enable arm/disarm Report Zone 4 LED ON mean enable bypass/bypass restore report Zone 5 LED ON mean enable System Status Reporting [AC loss, Battery Low, Siren Fail] Zone 8 LED ON mean enable System Reset report	●●○○ ○XX○ X #
15	Communicator Setting Mode	Zone 1 LED ON mean enable CMS Periodic Reporting Zone 2 LED ON mean enable Telephone Reporting Zone 3 LED ON mean enable Double Call Zone 4 LED ON mean enable Pulse Dialling ELSE DTMF Dialling	○●○○ XXXX X #
16	Receivers Option	Zone 1 LED ON mean Receiver 1 is Personal Reporting else CMS reporting Zone 2 LED ON mean Receiver 2 is Personal Reporting else CMS reporting Zone 3 LED ON mean Receiver 3 is Personal Reporting else CMS reporting Zone 4 LED ON mean Receiver 4 is Personal Reporting else CMS reporting Zone 5 LED ON mean Receiver 1 is Permanent else Backup Zone 6 LED ON mean Receiver 2 is Permanent else Backup Zone 7 LED ON mean Receiver 3 is Permanent else Backup Zone 8 LED ON mean Receiver 4 is Permanent else Backup	●●●● ●○○○ X #

39	Dialling Attempt	From 1 to 15 times dialling trial for Personal and CMS Reporting	005 #
40	Number of Rings to Call In	From 1 to 99 rings	010 #
41	CMS Periodic Test Report	From 0 to 24 hours	000 #
42	CMS account Number 1 (Receiver 1)	4 digit CMS account number 1	0000 #
43	CMS account Number 2 (Receiver 2)	4 digit CMS account number 2	0000 #
44	CMS account Number 3 (Receiver 3)	4 digit CMS account number 3	0000 #
45	CMS account Number 4 (Receiver 4)	4 digit CMS account number 4	0000 #
46	Change Installer code	5 digits Installer code	12345 #
47	Reset Master Code	Reset Master Code as 1234	#
48	Reset Memory	Reset all programming settings except installer code	#
Exit Installer programming Mode : [COM] + [#]			

Remark:

● = LED ON, ○ = LED OFF, X = Not in used

Press the zone number to toggle the zone LED to ON or OFF