
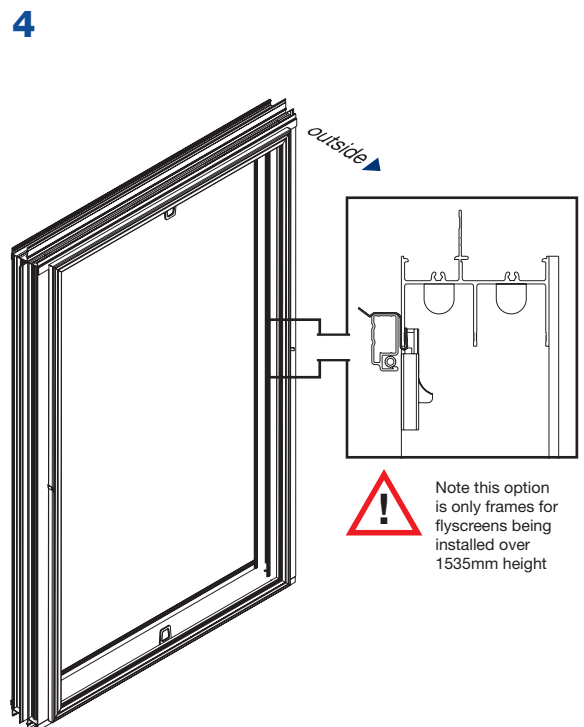
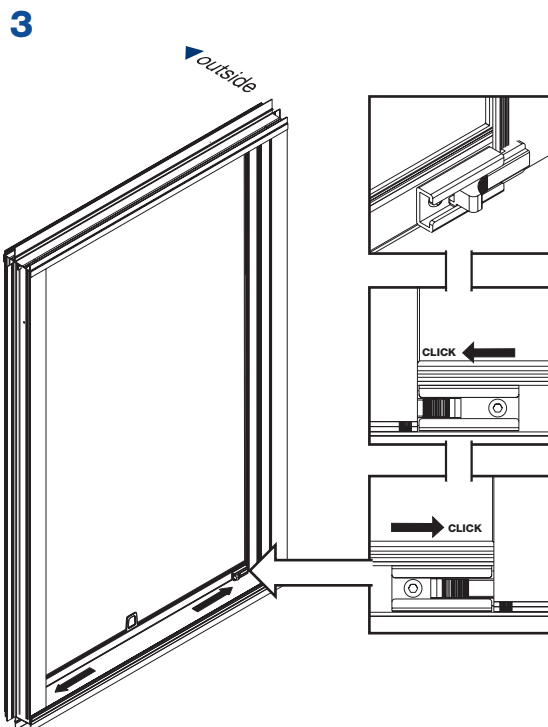
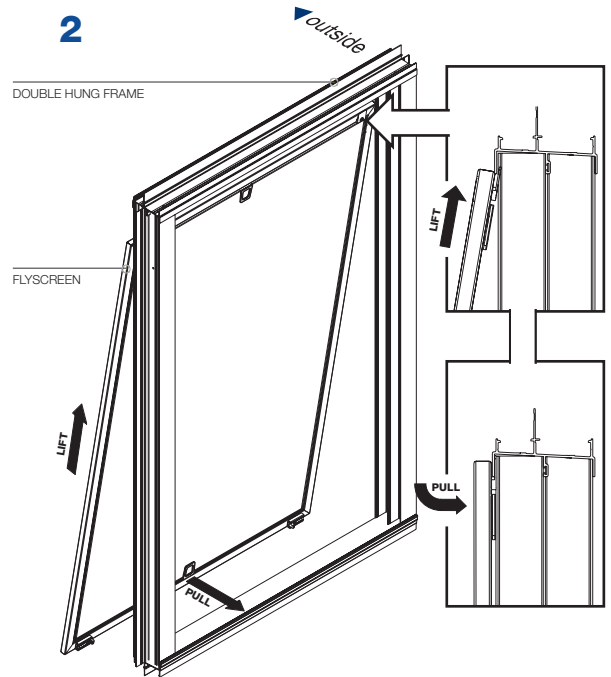




Aluminium Double Hung

On Site Installation Instructions | Flyscreen Installation

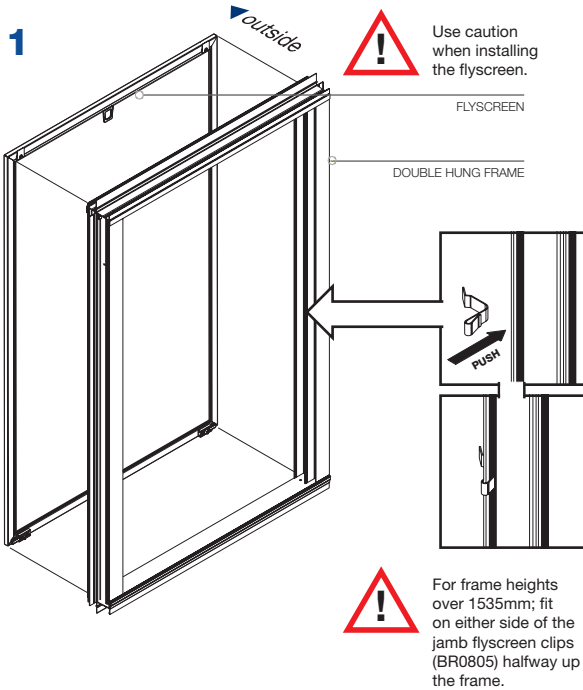

Aluminium Awning

On Site Installation Instructions | Flyscreen Installation

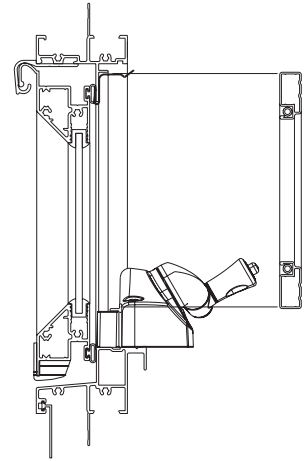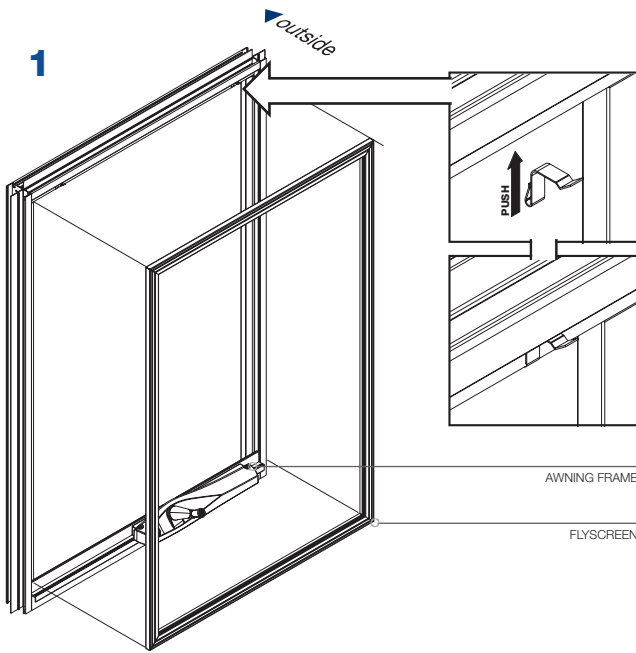

! Use caution when installing the flyscreen.

! For frame heights over 933mm; fit on extra flyscreen clips (BR0805) on either side of the jamb

