


Weser

WY301
Concealed Cistern


Installation Demo

Weser[®]


WY301

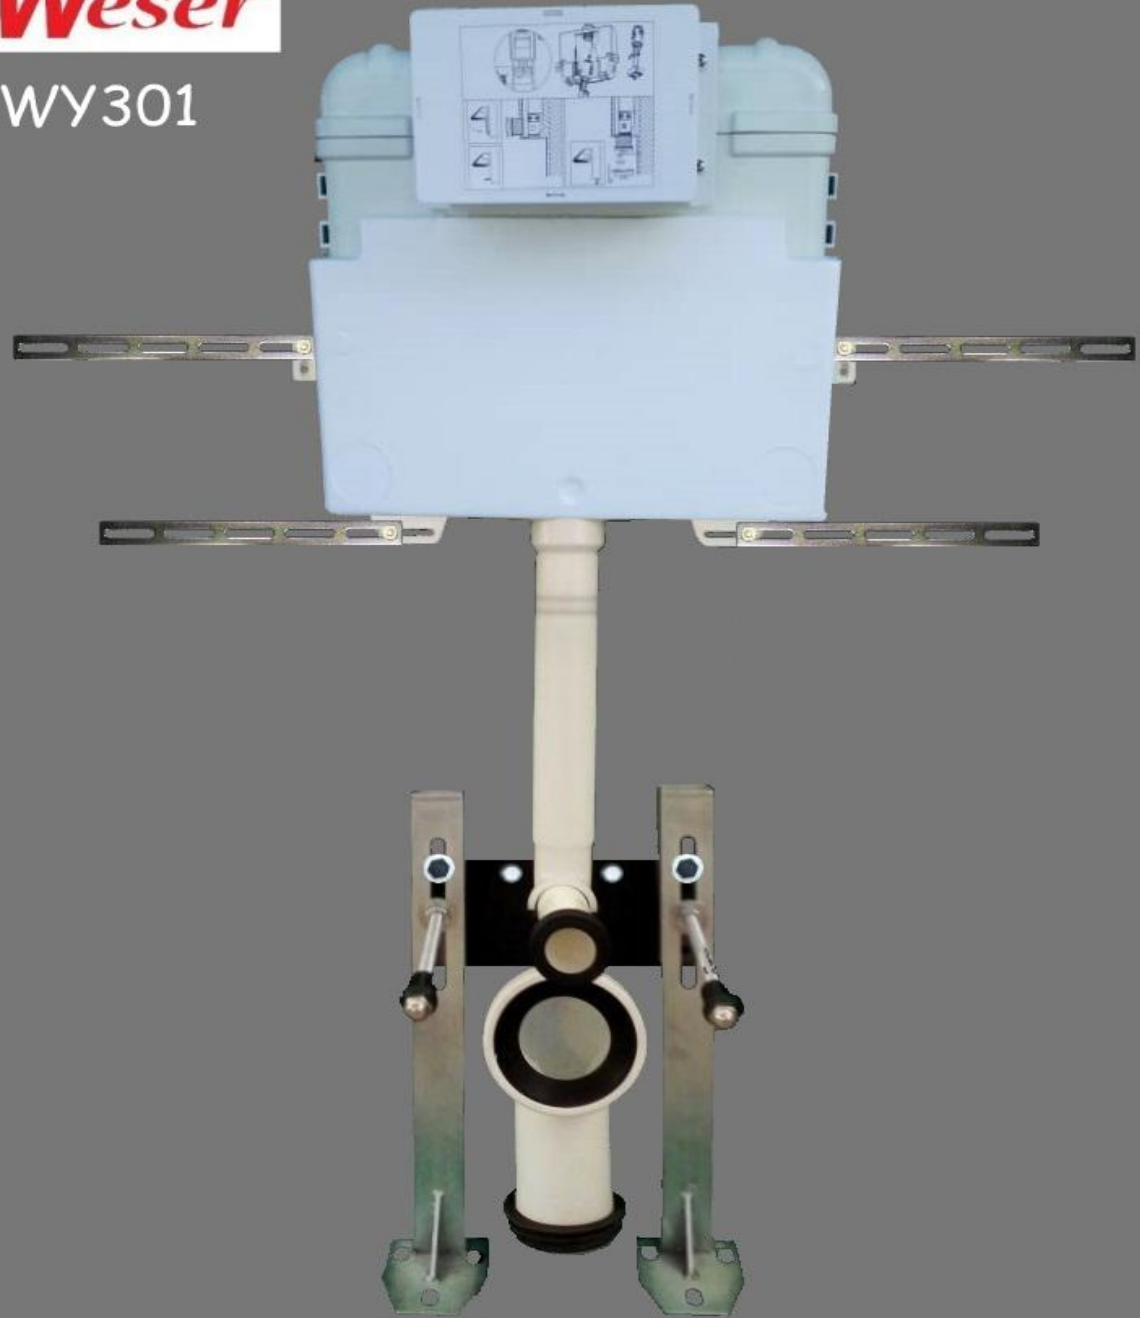

WY301 Technical Drawing

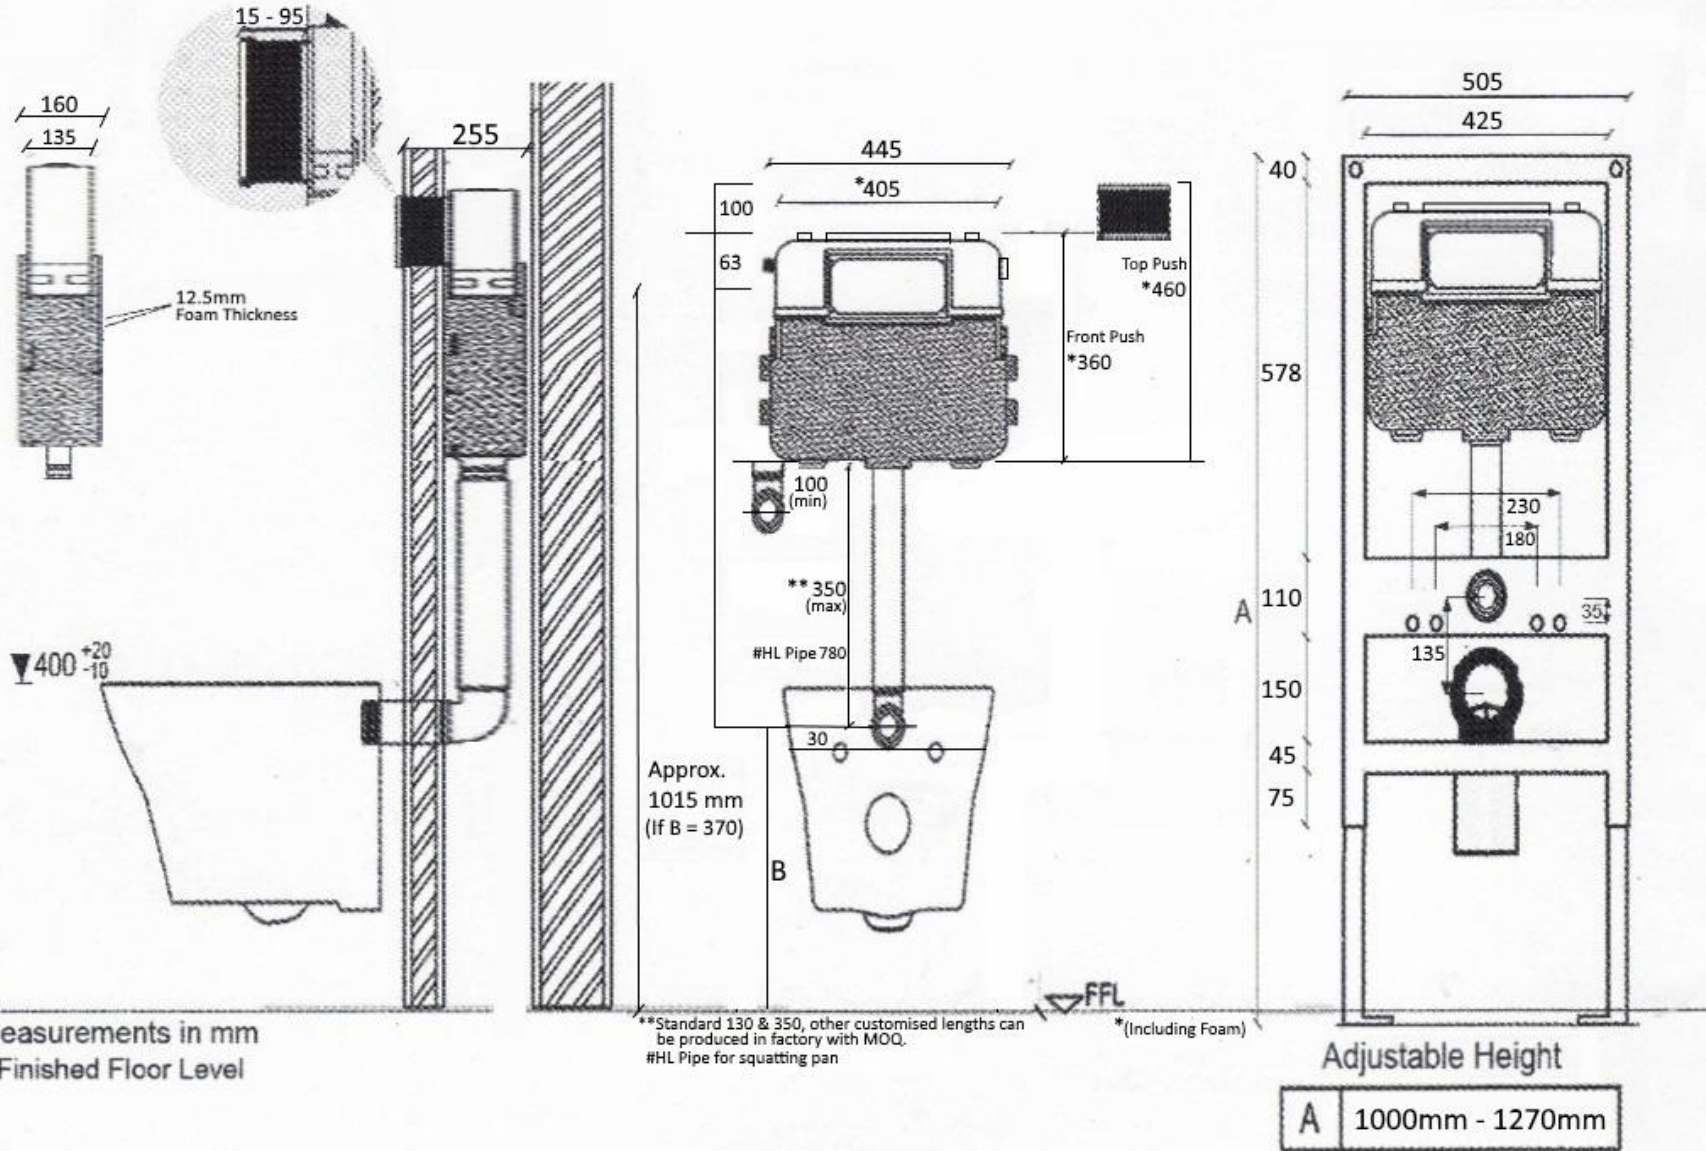

Confirm WC Dimension
*Please refer to WC drawings

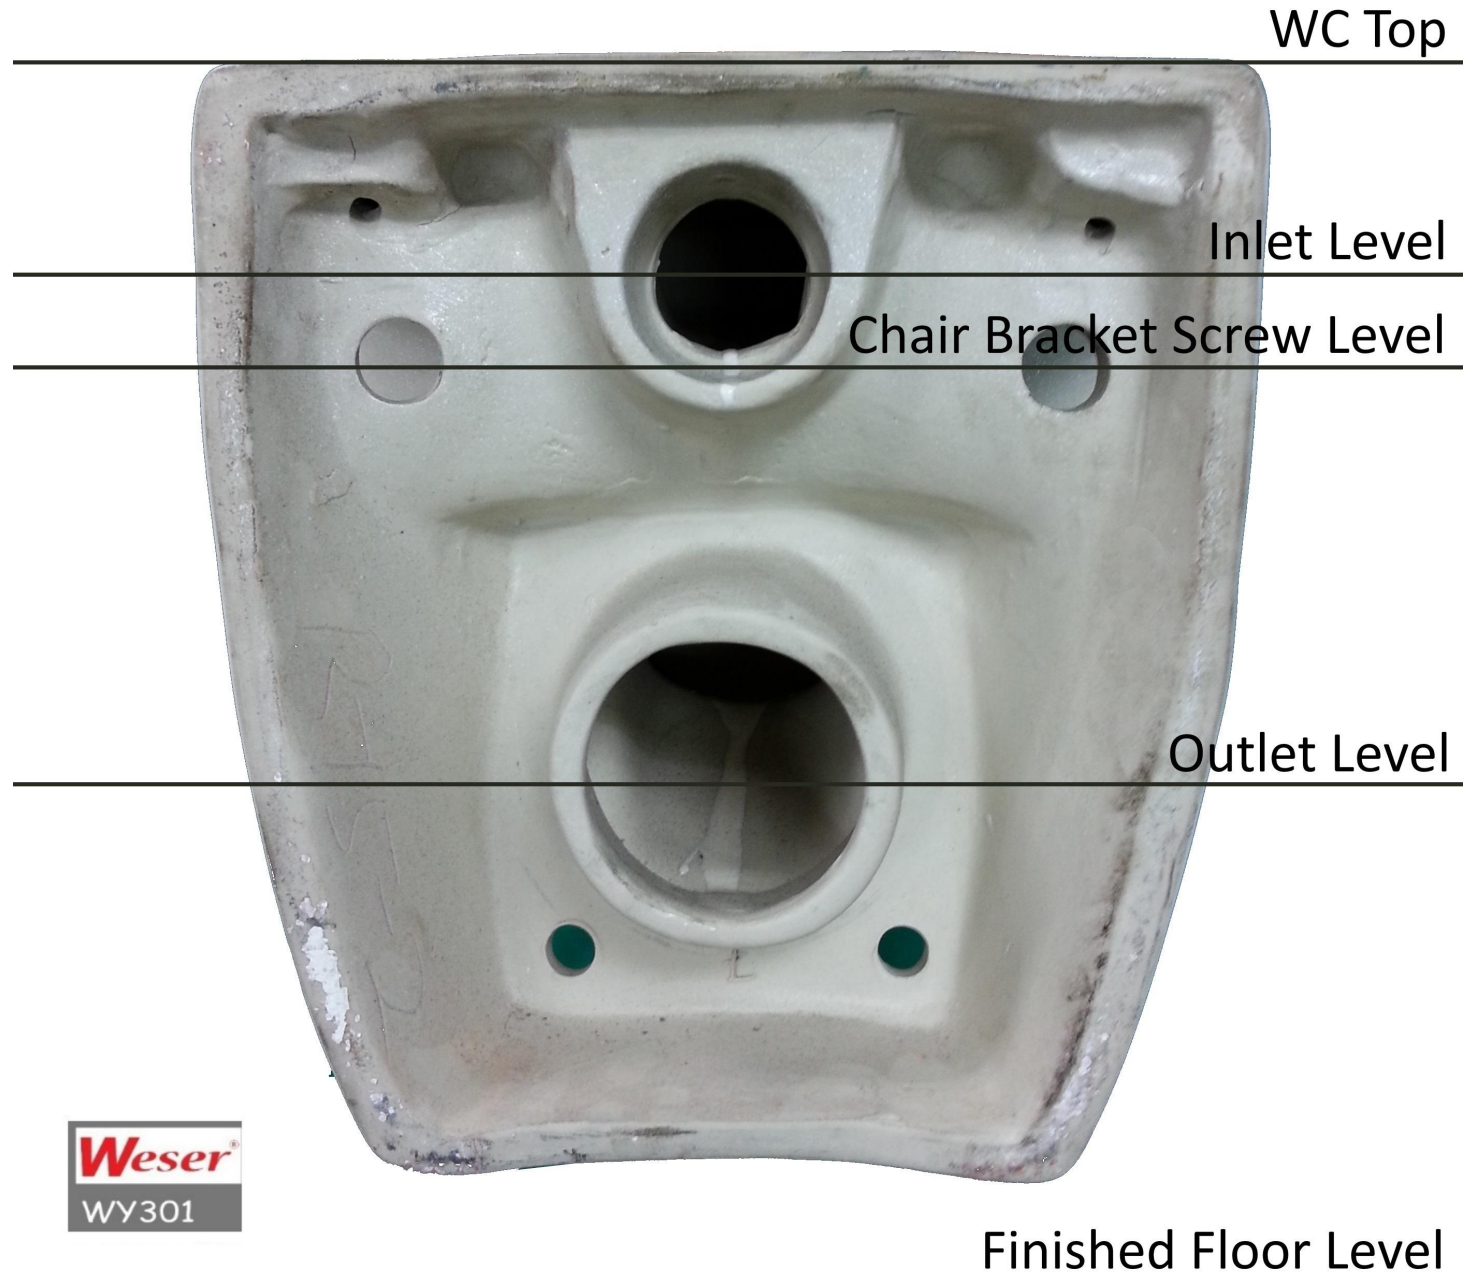

Attach Pipe Holder To Installation Template

*Please check to make sure that the dimension of Installation Template is matching with the WC before installation.

Warning:

Both our Pipe Holder and Installation Template are protected by the Intellectual Property Law.



↑
Installation Template

↑
Pipe Holder

Step 1

Finished
Floor
Level
(FFL)



Chair Bracket base

Step 2

Inlet
Level




*Distance between
FFL & Inlet Level
refer to WC technical
drawing.

FFL








Tighten Nuts

Weser[®]

WY301

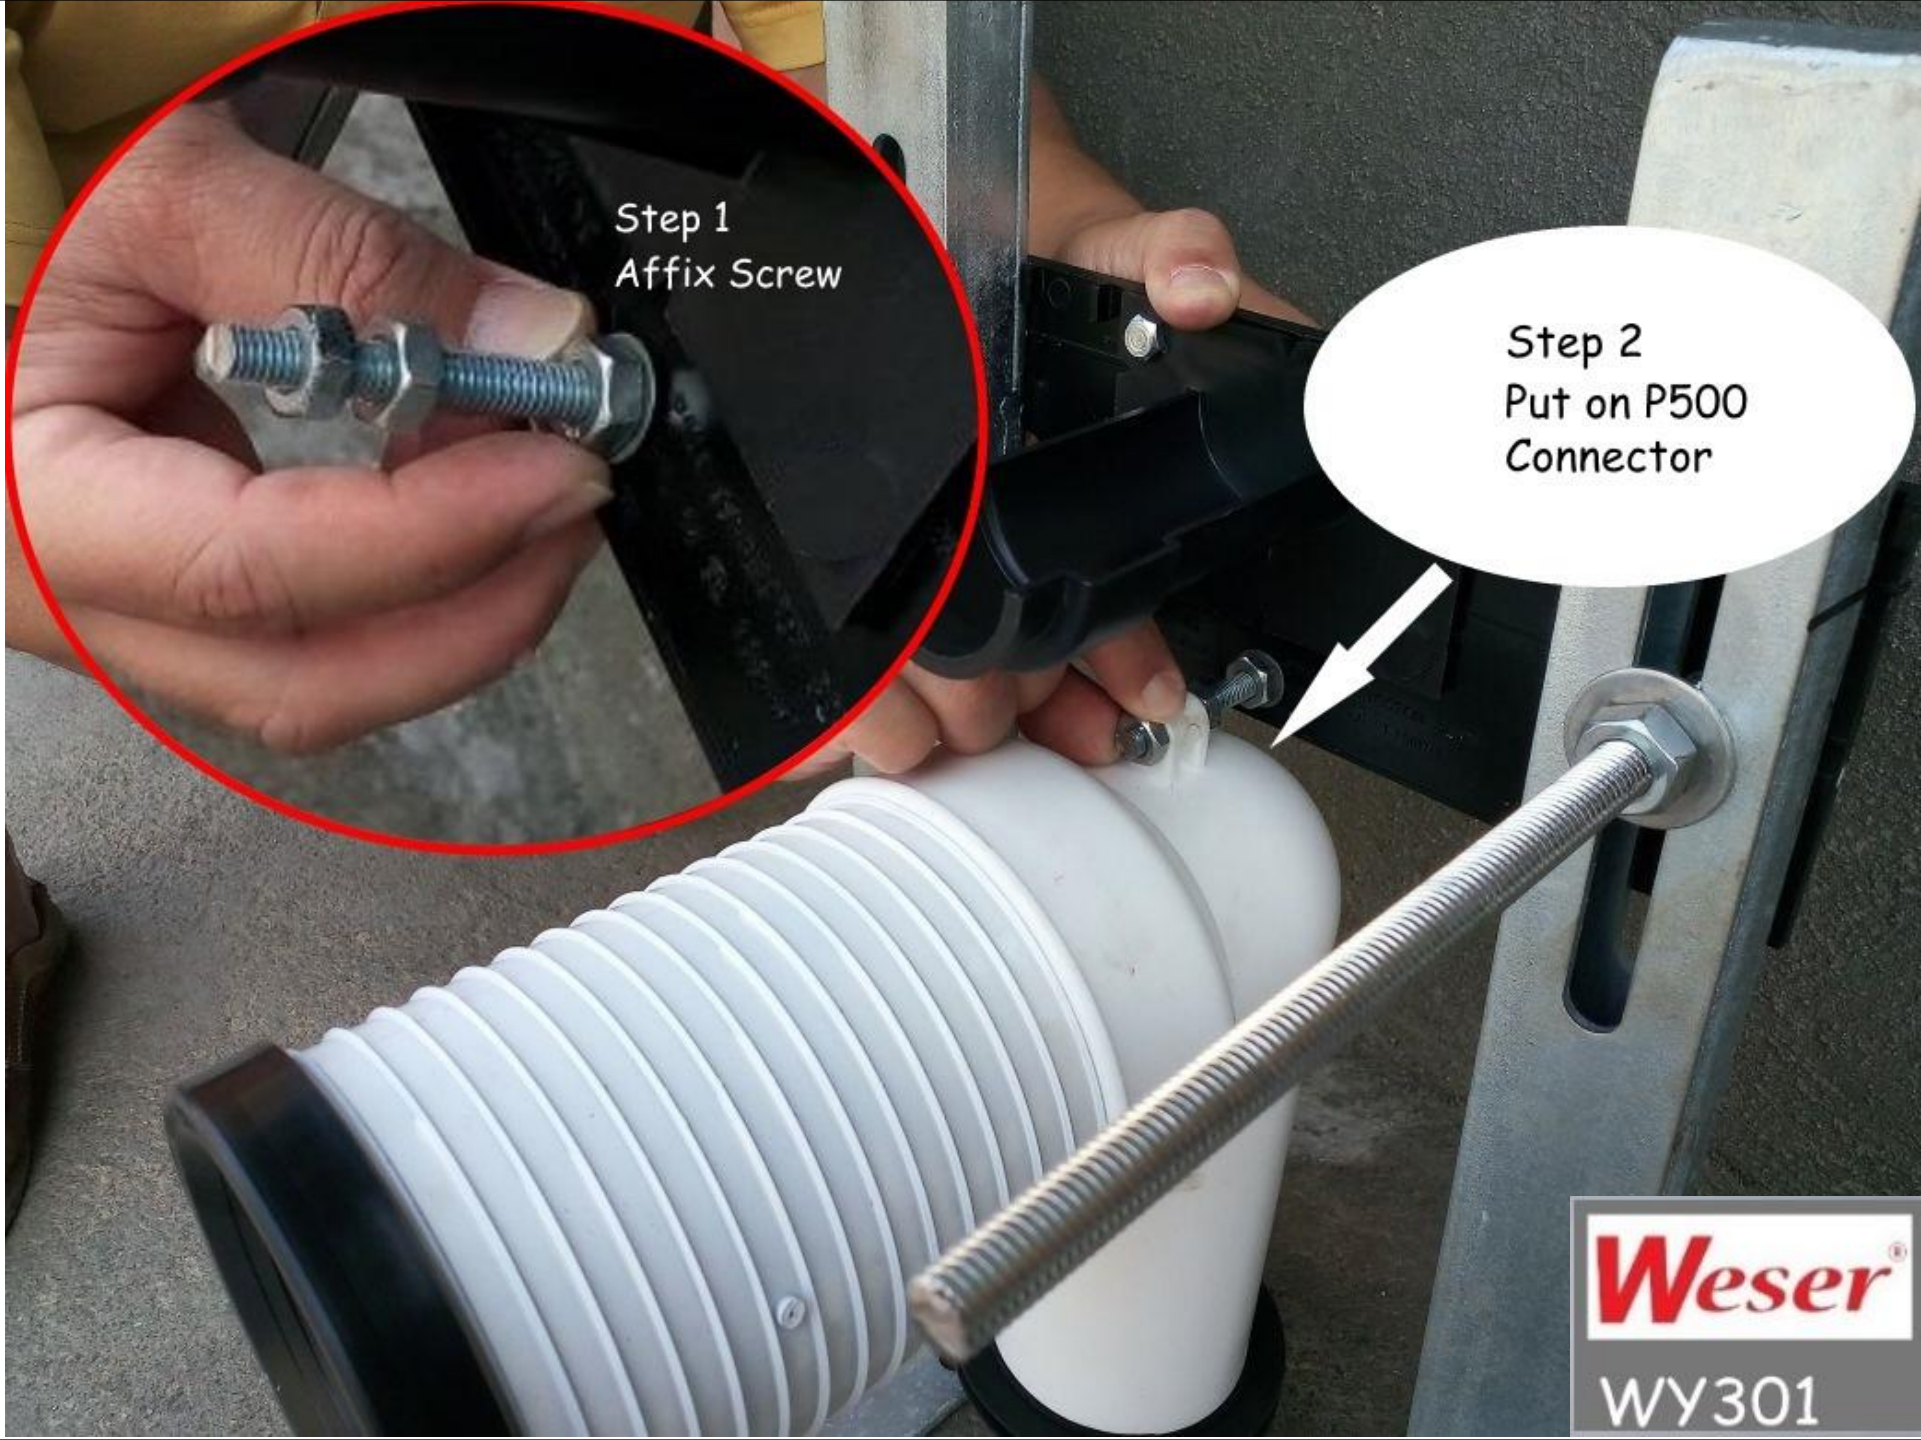

Step 1
Affix Screw

Step 2
Put on P500
Connector

Weser[®]
WY301

Assembled Set Ready For Installation



Weser[®]

WY301



Put Connector Outlet Into PVC Pipe



*Levelling Is Important




Tighten Anchor Bolt Nuts when it's confirmed that there's no tilting

Weser[®]

WY301


Front Push Model

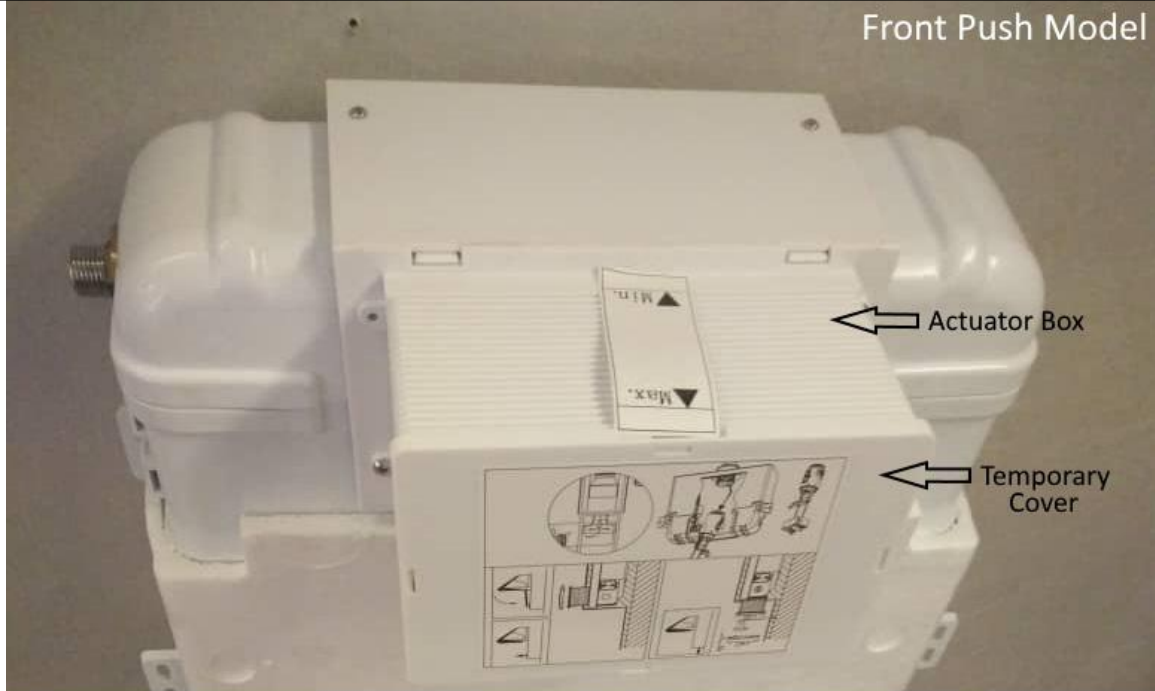

Affix Actuator Box & Temporary Cover

Top Push Model



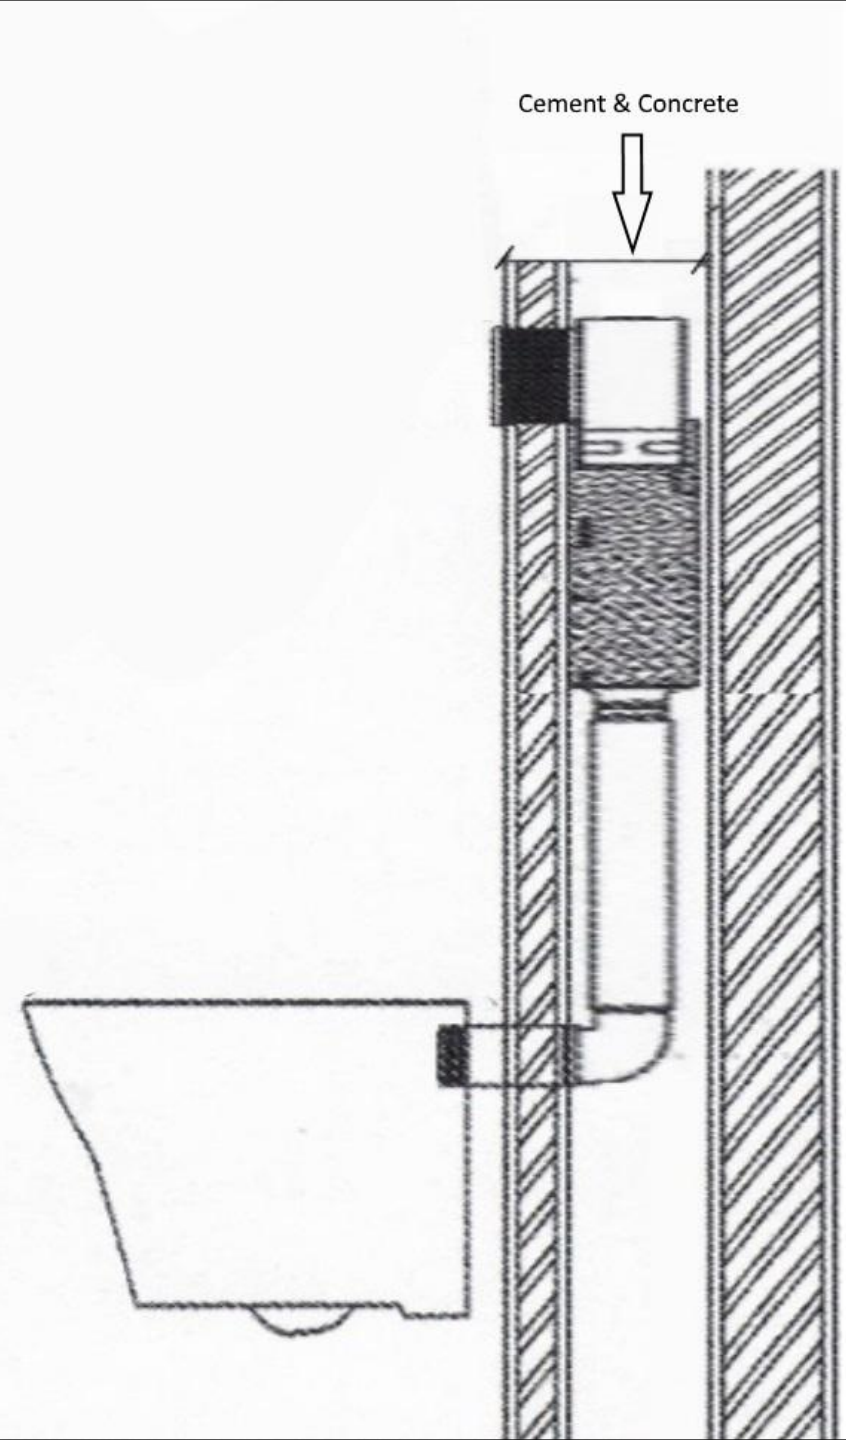

Temporary Cover




FFL →


Weser[®]

WY301

When cement works are done, take out temporary cover, install Button Base.

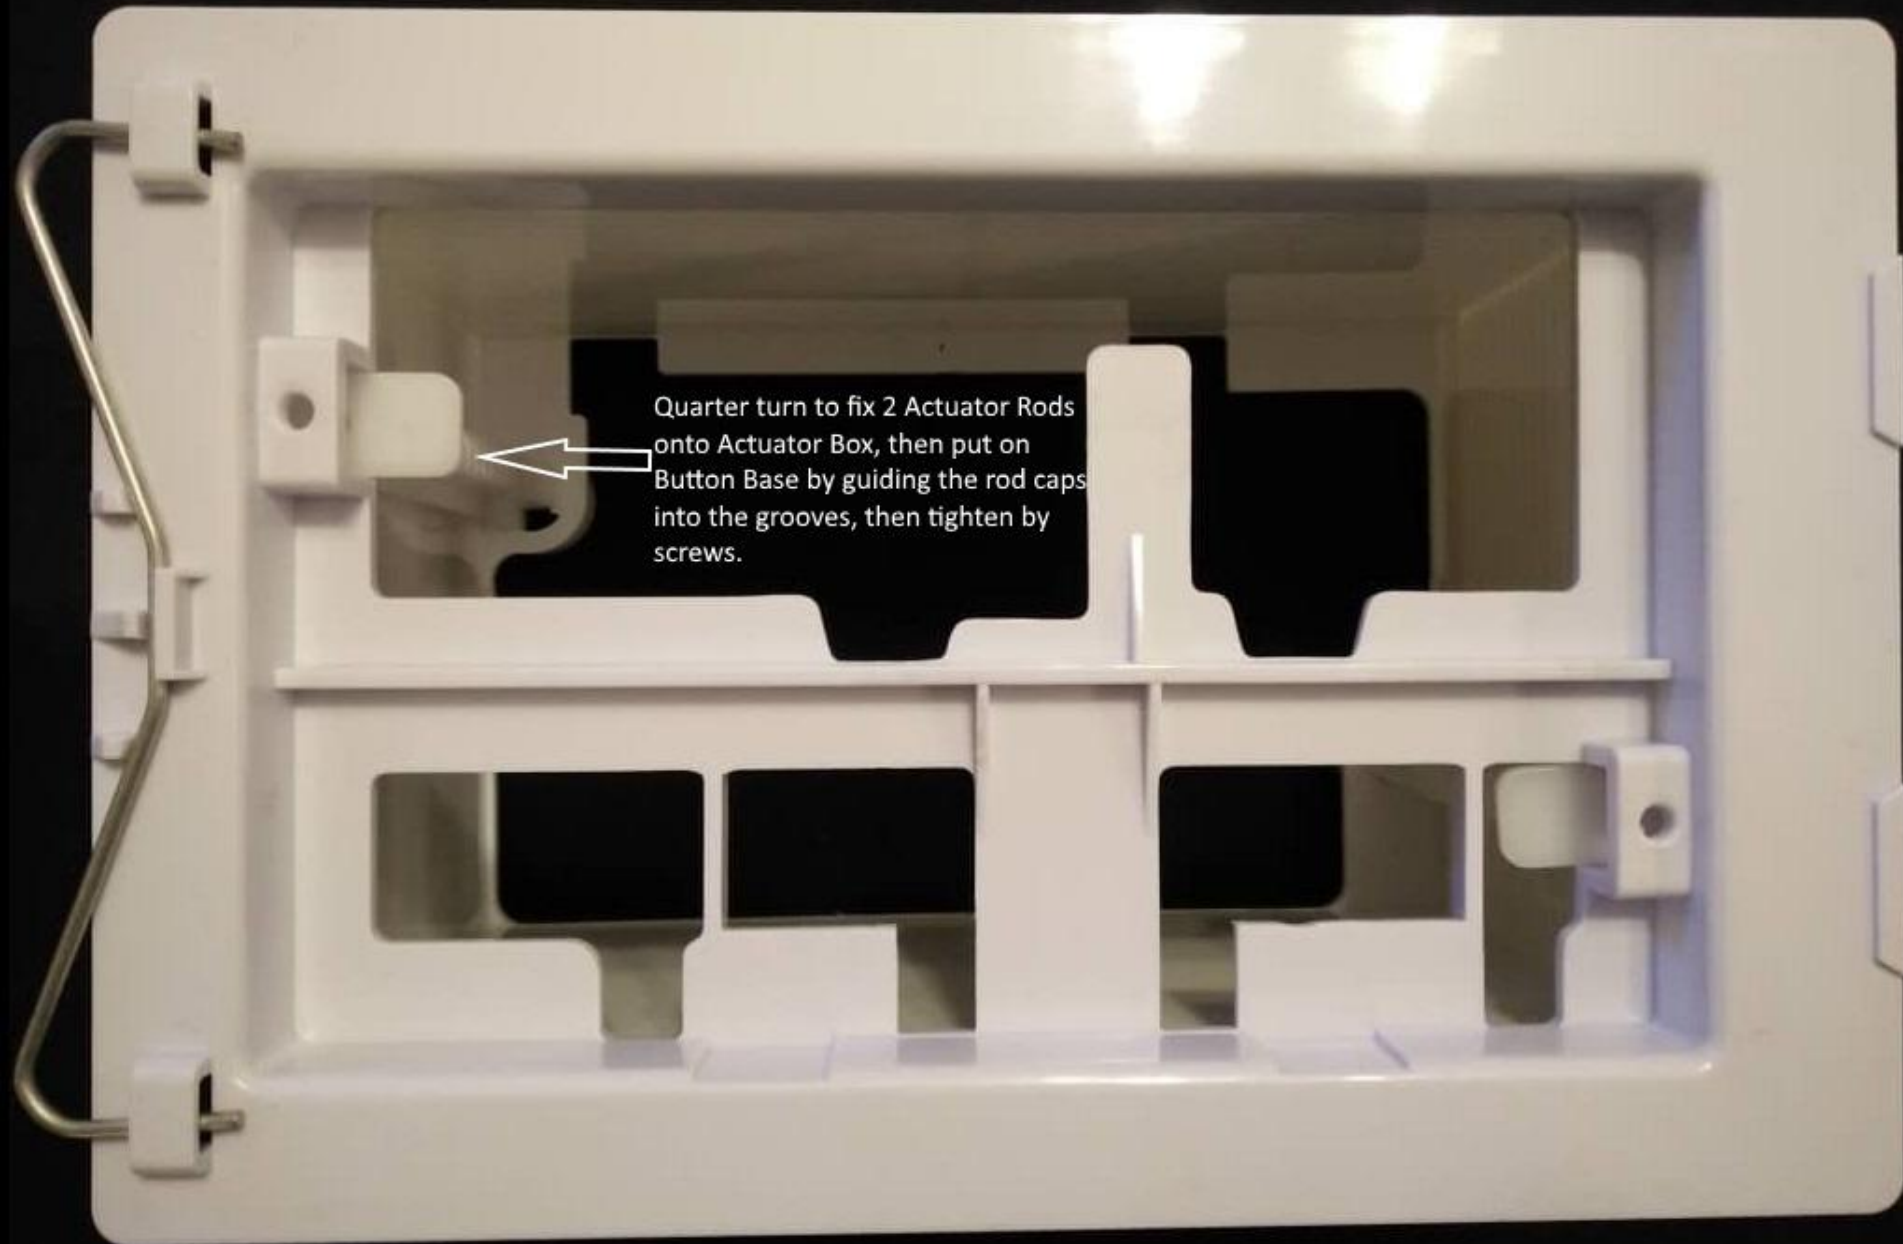


Quarter turn to fix 2 Actuator Rods onto Actuator Box, then put on Button Base by guiding the rod caps into the grooves, then tighten by screws.

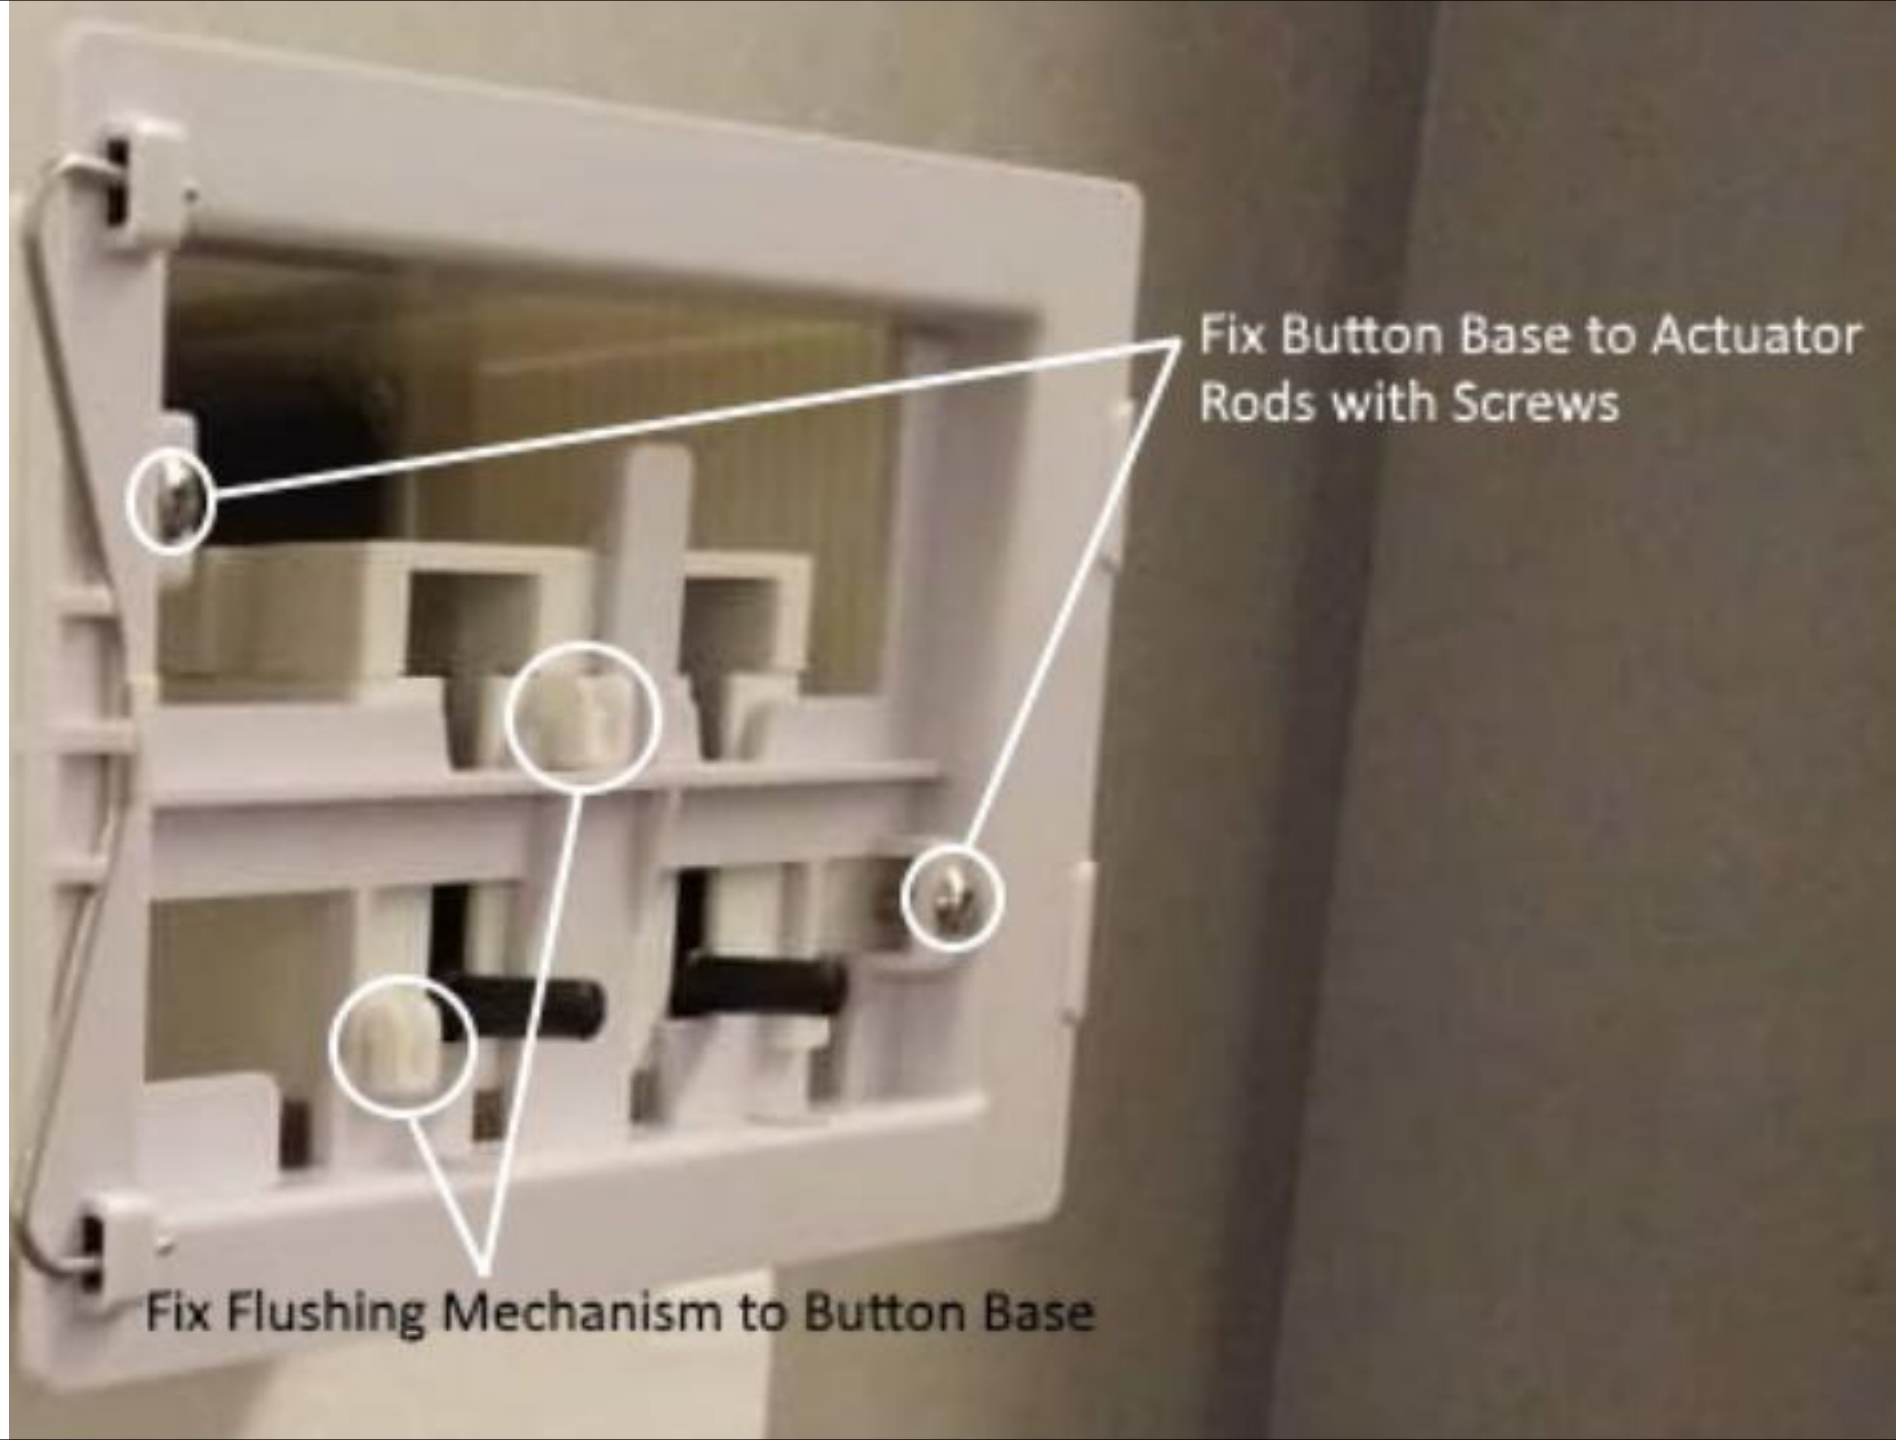


Fix Button Base to Actuator Rods with Screws

Fix Flushing Mechanism to Button Base

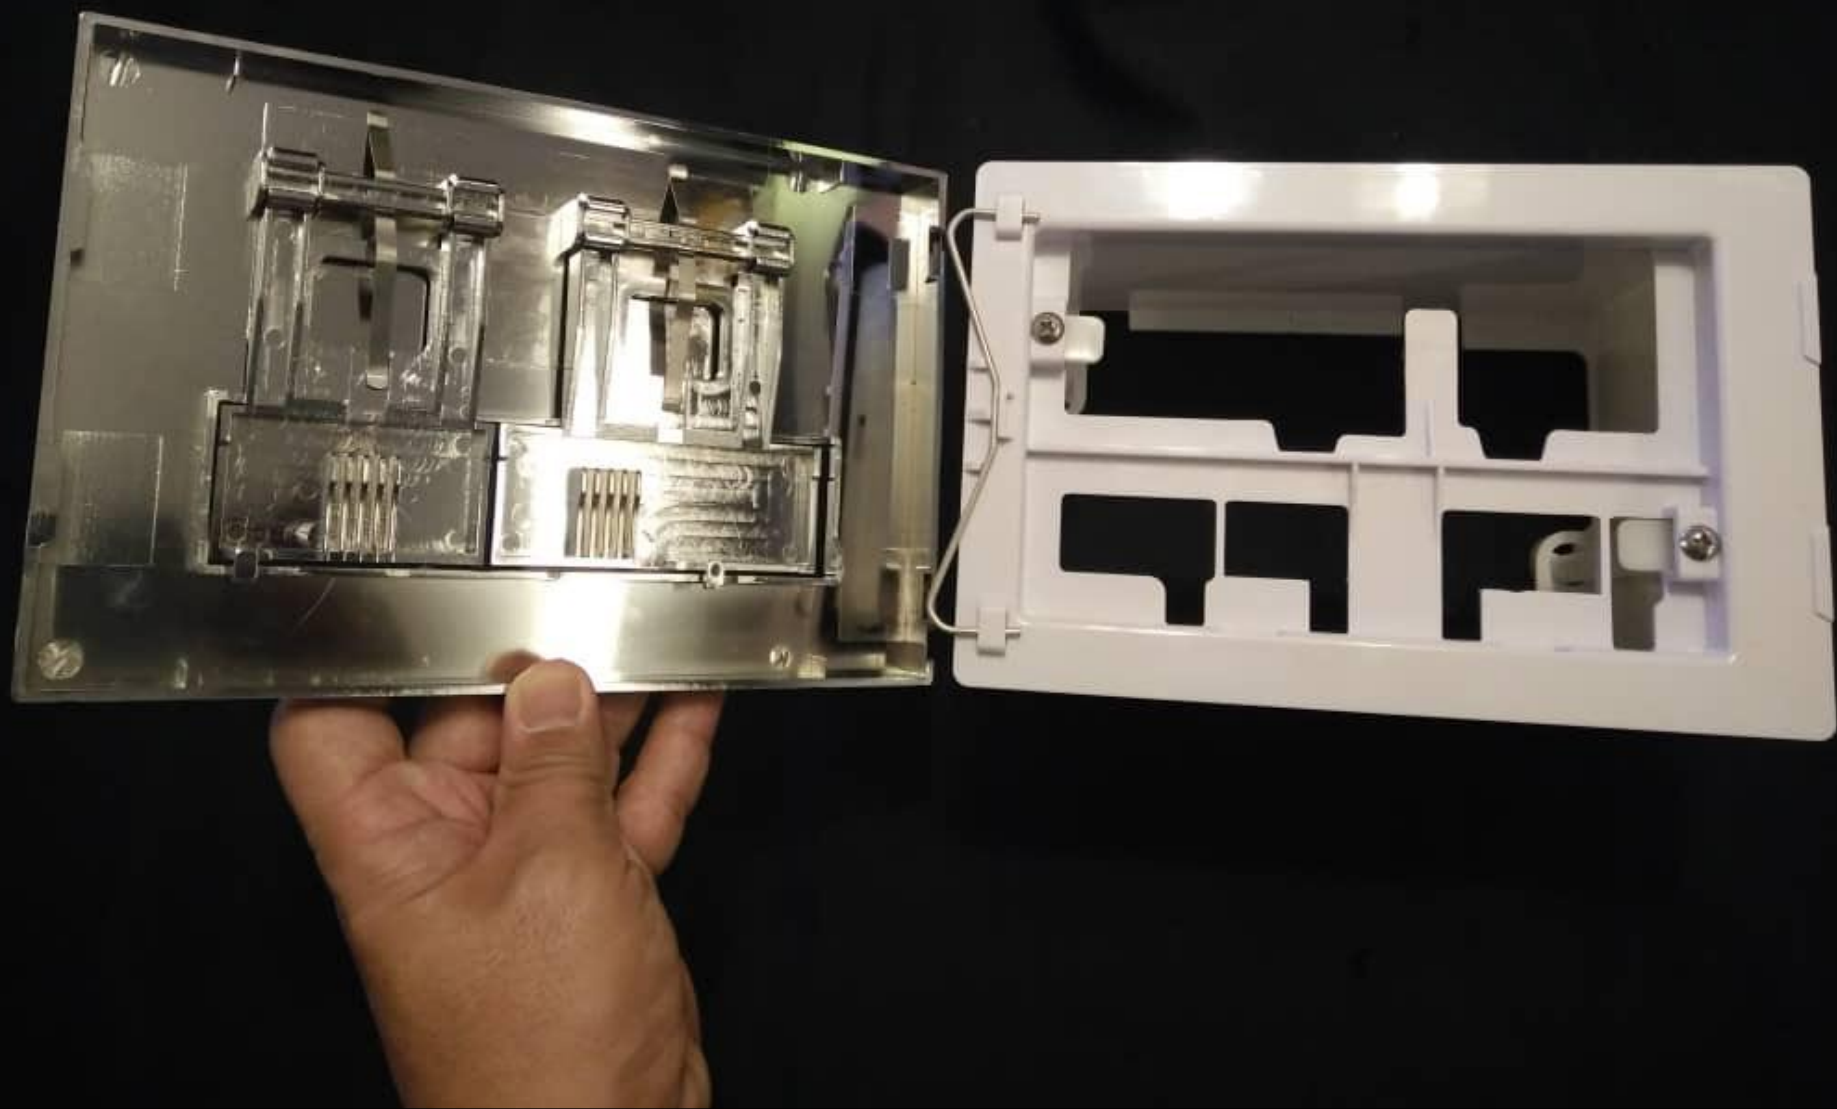

Swing to close.

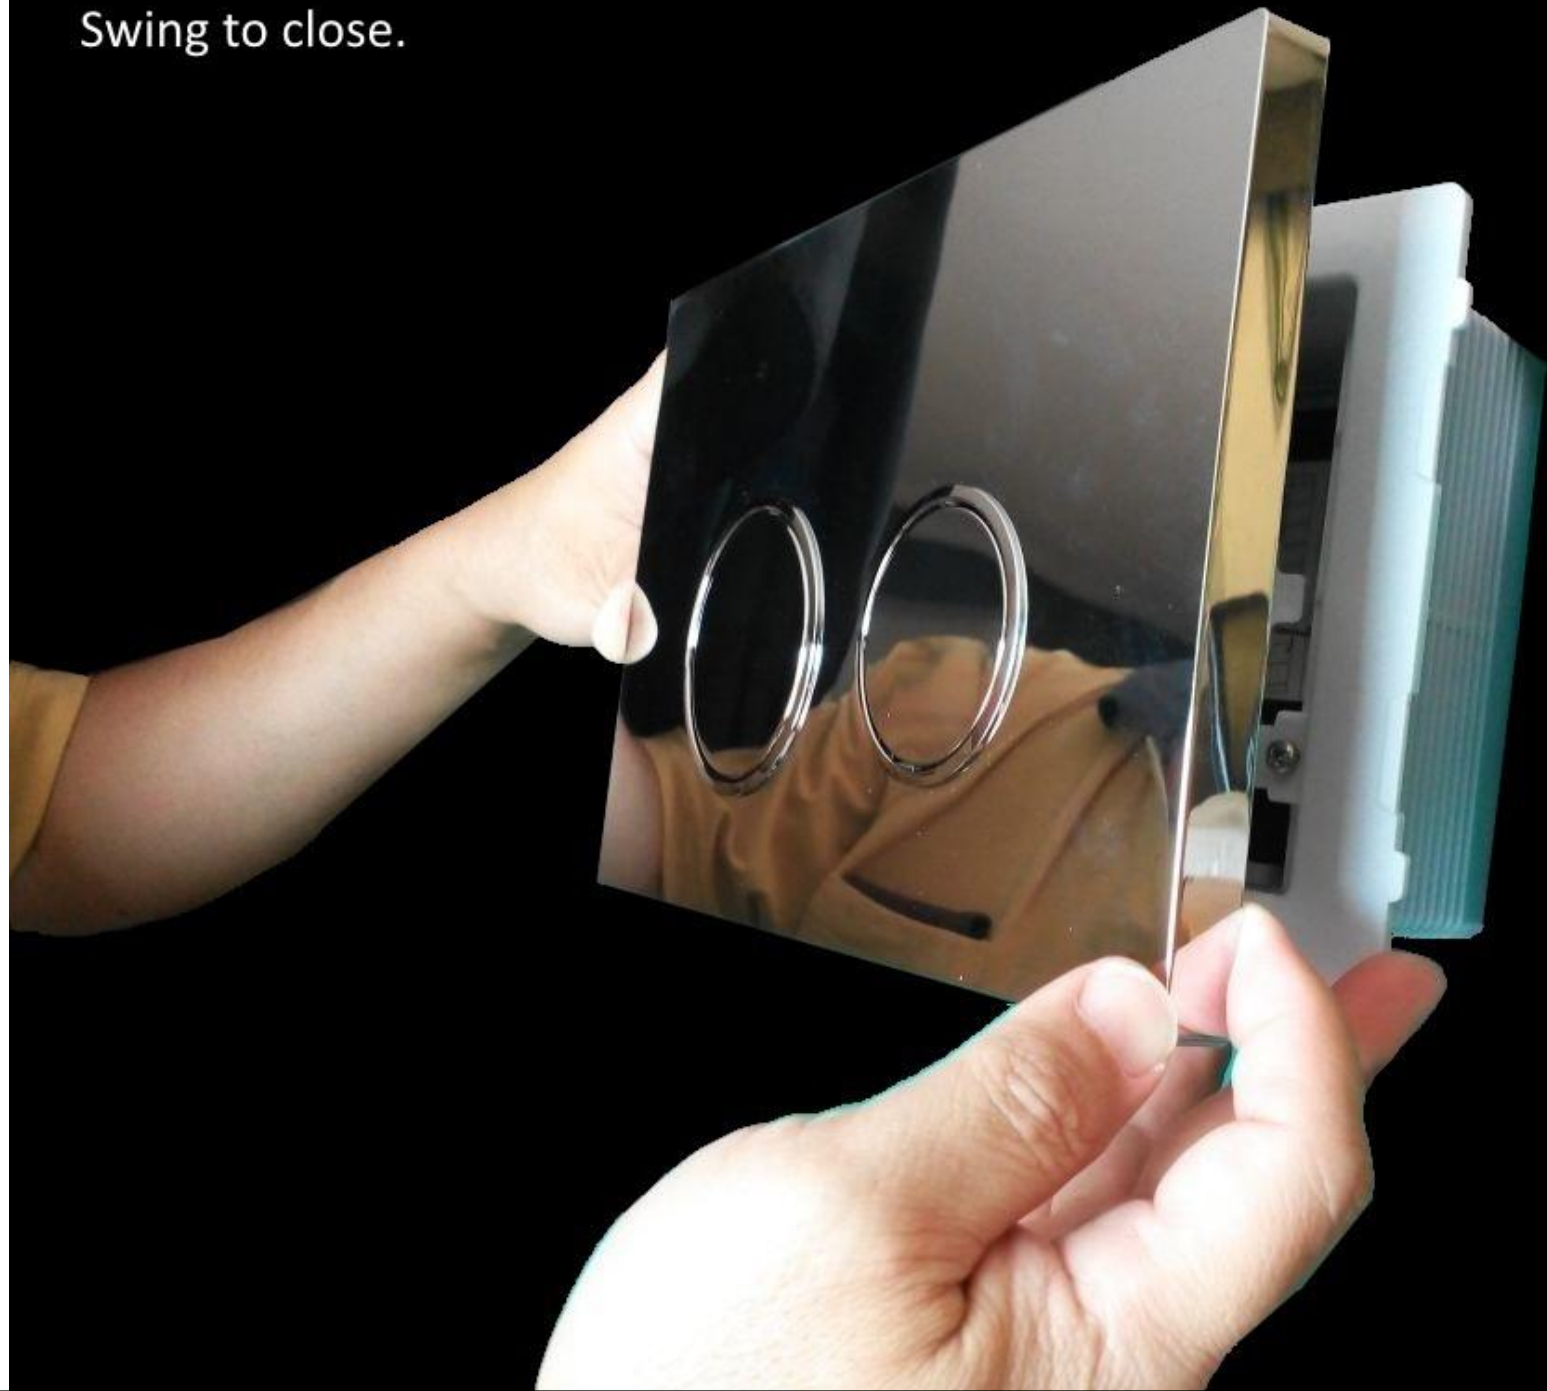



Weser[®]
WY301

THANK YOU!