



ESB902 RONDISH WIRELESS BATHROOM CALL SYSTEM

CARE for your love one...

Early alert of RISKS




BS 8300-2:2018 Design of an accessible and inclusive built environment.
Buildings - code of practice

Product Description

The **Wireless Pull Cord Disabled Bathroom and Toilet Alarm System** is an easy to install bathroom alarm system that enables a disabled or elderly bathroom user to pull a cord, automatically sending a visual and audible alert to the appropriate nearby caregiver. This wireless design is ideal for anyone concerned about a loved one or any institution that needs to provide appropriate care, proving useful in homes, care homes, hospitals, educational facilities, swimming pools, supermarkets and more.



WCP-11

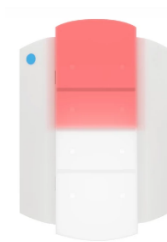

ILB-11

What is the Wireless Pull Cord Bathroom and Toilet Alarm System For?

The Wireless Toilet Alarm System is designed to ensure that vulnerable users can use bathrooms with the peace of mind that assistance can be provided if necessary. The simple pull cord design with send both a sound and light alert, triggering a response from the appropriate caregiver. We would recommend the Toilet Alarm System for:

- Disabled users
- Elderly users

How Does the Disabled Bathroom Toilet Alarm System Work?

The pull cord incorporates a transmitter, that when pulled sends an alert directly to the emergency call alarm. When the emergency call alarm receives an alert, it will sound an alarm and a visible flashing light that will alert all people who are nearby.

What is the Range of the Wireless Pull Cord Disabled Bathroom Alarm System?

The full range of the Wireless Disabled System is 100 metres (Open area), which is ideal for public centres and care facilities where a carer or medically trained member of staff may be a distance away from the bathroom. We will always recommend that you test the alarm system before use.

Who Should Buy the Wireless Pull Cord Disabled Bathroom System?

The Pull Cord Bathroom and Toilet Alarm System is suitable for anyone concerned about the safety of a loved one, a friend, work colleague or those who may be visiting their institution. The Bathroom System meets all appropriate disabled and alarm operational standards, which also means that it is recommended for offices and public spaces. If you live in, or are responsible for care in any of the following places, we would recommend the Disabled Bathroom System:

Hospitals, nursing homes, care centre
Schools, colleges, universities
Homes, offices
Public centres, shopping centres, swimming pools

This system can ensure that disabled people can be provided with assistance if in trouble. As it meets international standards, you can rest assured that it is suitable for most public institutions and health care facilities.

PRODUCT

Eightfold Sdn Bhd (775128-W)
69-1, Jalan SS19/6, 47500 Subang Jaya,
Selangor Darul Ehsan, Malaysia
Tel: 03-5612 8169
www.eightfold.com.my



Specification

ILB-11

- Battery Type: C-type x 6
- Power Connection: External 12Vdc input. 2-wire power line
- Battery Life: 12 months (Standby)
- Sounder: Buzzer with volume control (VR adjustable. Max 85dB @10cm)
- Multiple colors LED (RED, WHITE)
- Low battery alarm
- Operating Temperature: 0 ~ 40°C
- Certification: CE/FCC




WCP-11

- Call and reset buttons 2-in-1
- Comes with removable pull cord
- IP65 Waterproof rating
- Replaceable batteries (CR2477 x 2)
- Battery Life: 2 - 3 years (Standby)



Installation

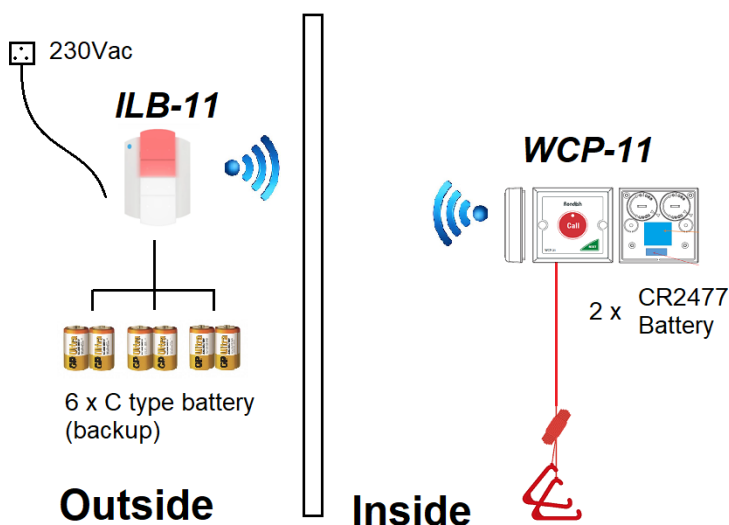

Steps:

1. WCP-11 come with battery. Affixed it to the toilet wall near the WC
2. Insert "C" type battery x 6 units (not included) to ILB-11 if optional battery backup is required, or the client intended to use battery to power on the indicator light.
3. Connect the ILB-11 to the existing 230Vdc power supply.